


# Instruction Manual

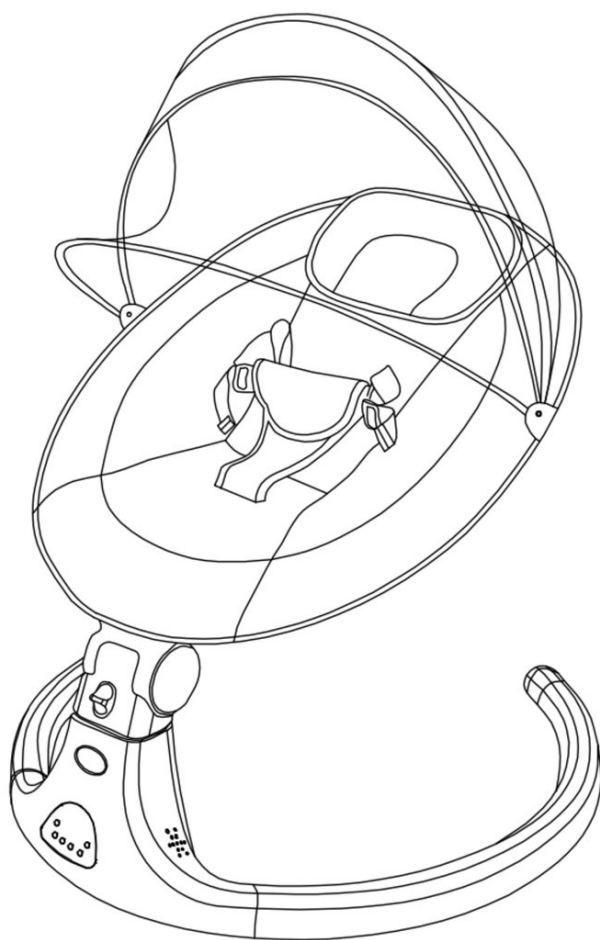


Before Installing and using, please follow the instructions carefully


# INDEX

|                                       |    |
|---------------------------------------|----|
| Component List .....                  | 01 |
| How to Assemble the Baby Rocker ..... | 01 |
| Power Supply .....                    | 04 |
| Remote Control Instructions .....     | 05 |
| Safety Instructions .....             | 06 |
| Product Specifications .....          | 07 |
| Cleaning and Washing .....            | 07 |

# Component List

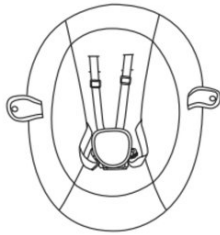

Seat cloth ×1

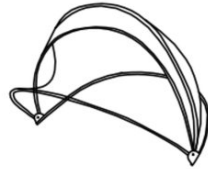

Canopy with mosquito net ×1




Motor ×1



Joint ×1



Foot tubes ×2

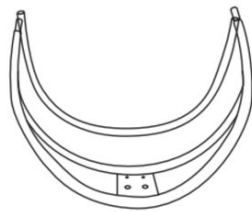

Seat tubes ×2



Screws for foot tubes  
(3.5\*12mm) ×4



Screws for joint  
(5\*18mm) ×2



Screws for joint  
(3.5\*18mm) ×2




Screws for motor shaft  
(5\*8mm) ×2 (1 as spare)

## How to assemble the baby rocker


### 1. Assembly method (This should be done by an adult)

#### (1) Assemble the base

Please insert the plastics on both sides of the base into two foot tubes, and tighten the 4 screws (3.5\*12mm) to 4 holes with the screwdriver

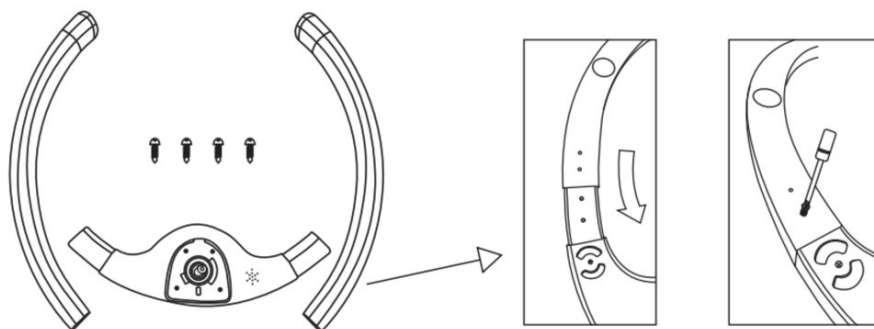


## (2) Assemble the seat frame

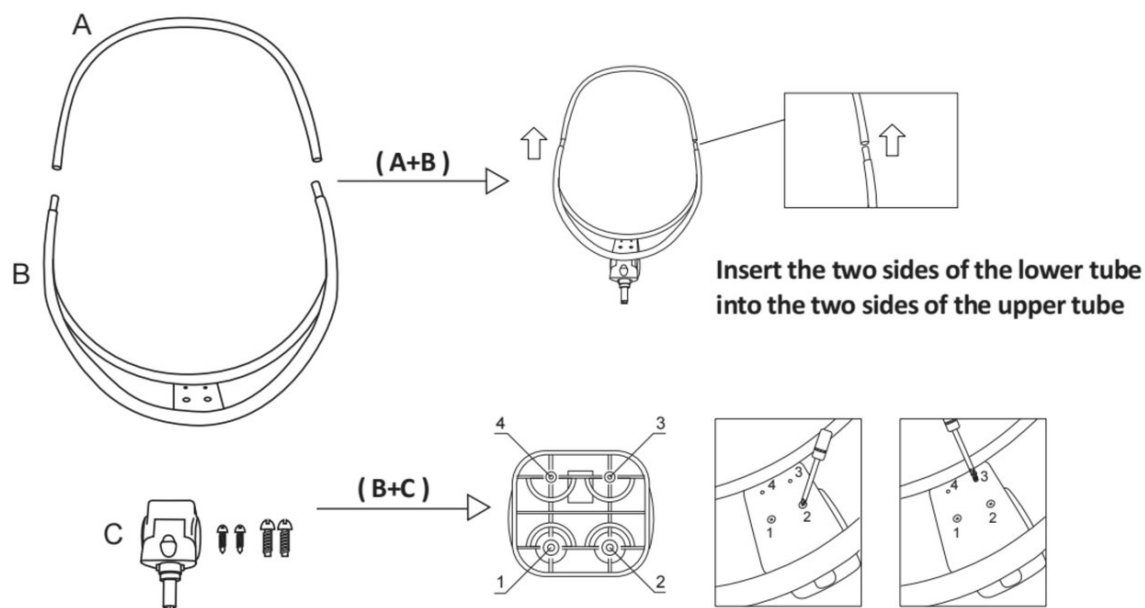


## (3) Connect the base and the seat frame


Attention: The plane part of the shafting should be aligned to the back of the main shaft

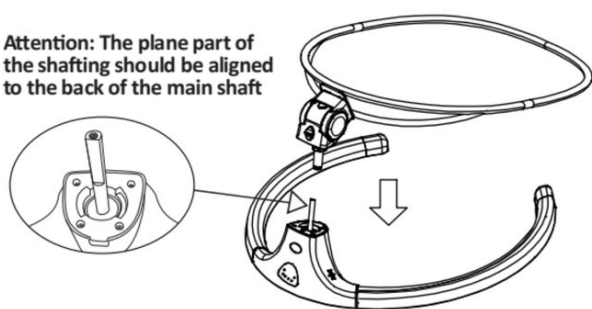

## (4) Install the seat cover

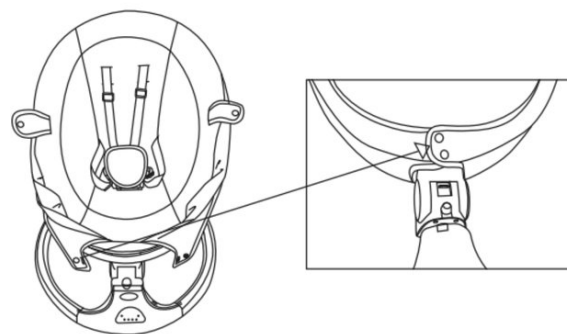

(5) Press the button at the back, then press two buttons of the joint and put it to the lowest position. Put the washer first, and then twist the screw (5\*8mm) to parallel with the hole with the screwdriver

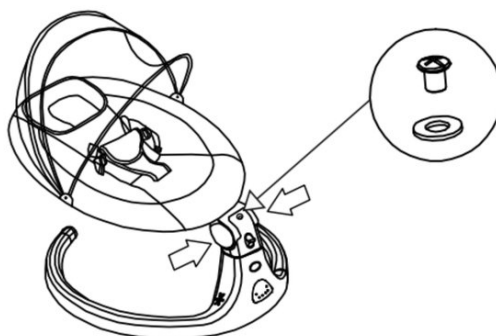


## 2. Angle adjustment (Adults hold the top of the seat pipe/tube with their hands when adjusting the gear)

### (1) Half-lying position angle




Press the button to adjust the angle

### (2) Lying position angle. Warning: The weight of the third gear is 0-9 KGS, and cannot exceed the weight of 9KGS.

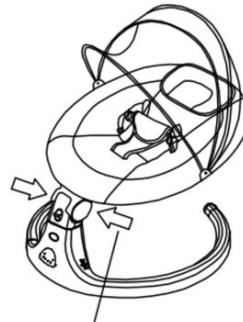


Press the button to adjust the angle

### (3) Angle unlock and lock

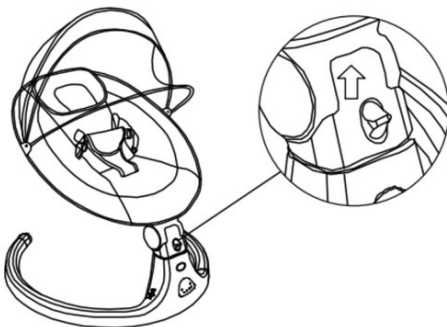


Push upward to unlock (can swing)

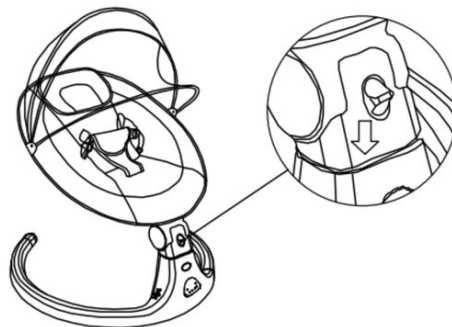

Push down to lock (can not swing)

## 3. Folding adjustment

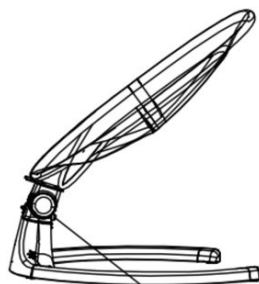


(1) Press the round button, then press the joint button to the lowest position

(2) After folding to the lowest angle, this product cannot be used




# Power Supply


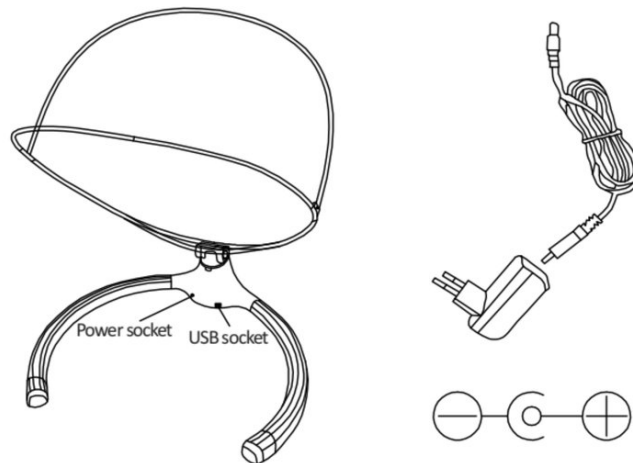


- \* **One:** The standard power supply is the 5mm adapter supplied with the product to supply power, the adapter input voltage is AC100-240V, 50/60Hz; the output voltage is DC6V, 1.0A
- \* **Two:** The power bank can be used for temporary power supply, but because the voltage is only 5V, there may be insufficient power, so long-term use is not recommended
- \* **Three:** You can use 4 AAA dry batteries for temporary power supply. Due to the large difference in battery quality, the time may vary

# Remote Control Instructions

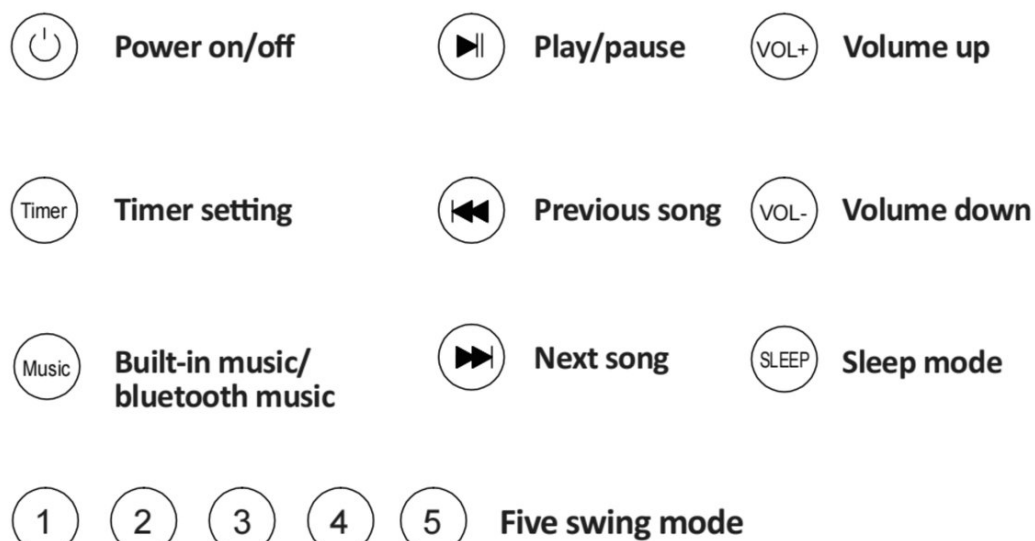

## Panel

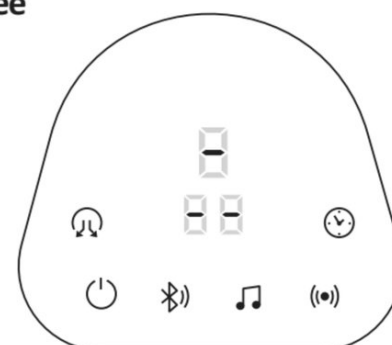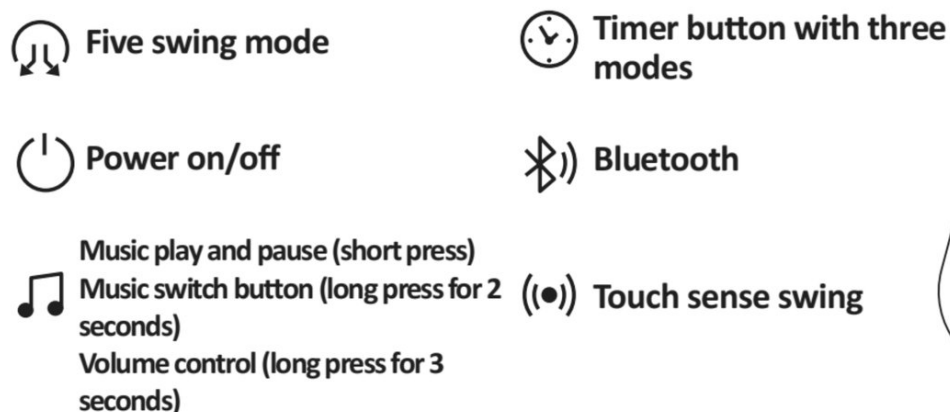

# Safety Instructions

## WARNING

1. Keep the seat belt on while using
2. Do not leave the child unattended
3. Applicable age: 0-12 months old
4. The maximum weight for this product is 9 KGS
5. DO NOT move or lift the product by the mosquito net
6. DO NOT move or lift the product when the child is in the seat
7. DO NOT hang other items from the the canopy except the supplied toys
8. DO NOT place the product at a high postion (table top, stairs or other high posltion from the ground) as it may fall and cause injury
9. It is dangerous to use this product on an elevated surface
10. DO NOT use the product on soft matter (sofa, bed) to avoid falling and cause suffocation
11. DO NOT use it for babies who can stand up independently to prevent hidden dangers such as being entangled in the seat belt or strangled!
12. This product is not classfied as toy
13. When the music player is connected, please make sure the volume is in a low voice initially
14. DO NOT use if any parts are missng or broken. Never substitute parts
15. Keep the product away from fire

# Product Specifications

|                    |                                     |
|--------------------|-------------------------------------|
| Product Name       | Baby Rocking Chair                  |
| Product mode       | B008-UP                             |
| Input voltage      | 100-240V/50/60HZ0.3A                |
| Output voltage     | 5-58VS100MA                         |
| Applicable age     | 0-12 Months 9KGS weight             |
| Executive standard | EN71-1 EN71-2 EN71-3                |
| Production date    | Marked on the body of the goods     |
| Warning            | Do not use the non-matching adapter |

## Warning

- (1) No short circuit of power terminals
- (2) Keep the adaptor away from child while using
- (3) Check the adaptor and accesories regularly and if you find any damage please stop using

## Cleaning and Washing

**Seat cushion:** The seat cushion is removable and is washable. It is recommended to wash by hand but not machine wash. After soaking in water and adding soft detergent, use clean water to clean it, then wring out the water and place flat out of direct sunlight to dry

**Inner filler:** fireproof hard resin cotton. **Warning!** Machine washing, bleaching and tumble drying are prohibited.

